


1 Package Content

Book Scanner

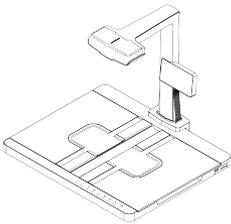

Remote



Hand Button



USB Cable




HDMI Cable



VGA Cable



Adapter

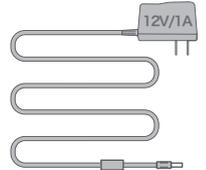


CD-ROM Disk



Accessories




Quick Instruction

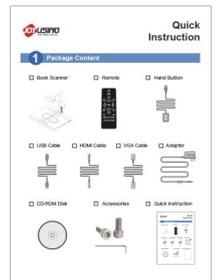


2

Installation and Interfaces Instruction

① Plug the arm vertically into the base

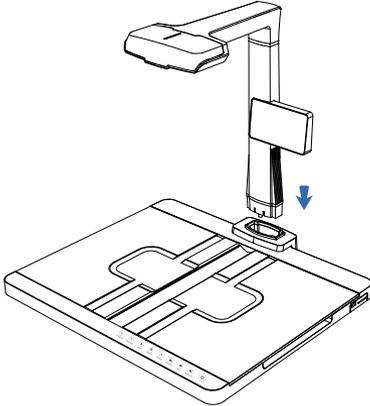

② Fix with screws and tool

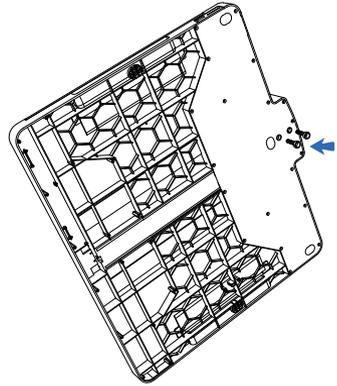

ZOOM IN



ZOOM OUT



LIGHT



FREEZE



ROTATE





RECORD



SNAP




HDMI/VGA

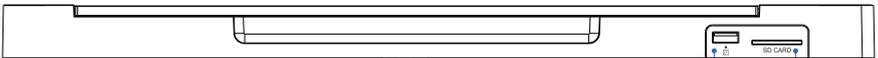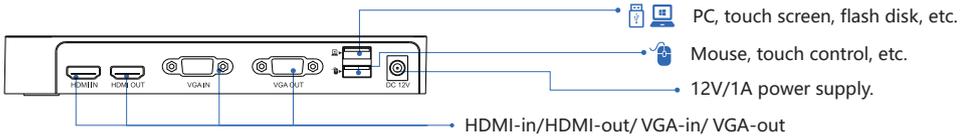

External control
(hand button/foot pedal)

SD card slot

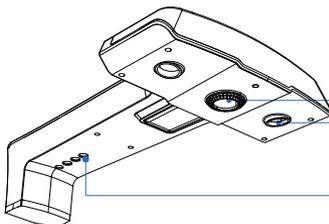

Lens
LED

Lasers launcher

3

Device connection




PC Connection

1. Install the software.
2. Plug in the power adapter to the power socket and book scanner.
3. Connect the USB cable to book scanner and PC.



PC-free

1. Plug in the power adapter to the power socket and book scanner.
2. Connect the HDMI/VGA cable to book scanner and touch screen.
3. Connect the USB cable to book scanner and touch screen(touch USB port).

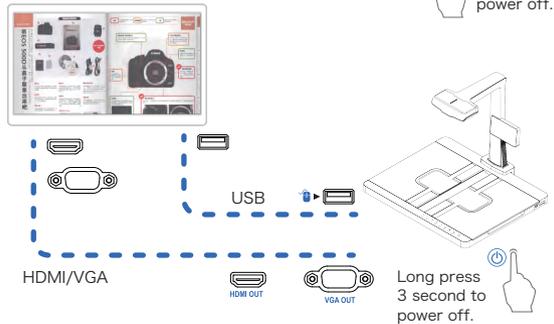


4

Attentions

1. Finger Press Area



Press the pages in this area

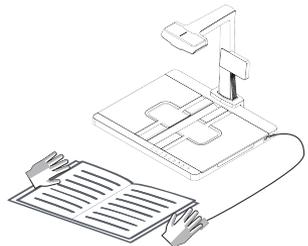

Before use:

- Do not leave it under direct sunlight or by heaters. It maybe discolored or damaged.
 - Do not place this product in any humid, dusty, or vibrating locations.
 - Carry the product by holding the base in both hands. Never hold the product by the arm or the camera head.
 - Use a soft, dry cloth for cleaning instead of any volatile solvent.
- When the device is not in use for a while, please turn off the power.

During use:

- Please prevent children from operating the device without supervision.
- Recommended environmental conditions: Temperature: 0°C - 40°C(32°F - 104°F).
- Humidity: 30% - 85%(No condensation).
- Use the product on a stable base, desk, or table.
- Do not press or pull the camera head with force.
- Do not point the camera lens directly at the sunlight. It may be damaged and fails to image.
- Do not look directly to the LED or lasers to prevent your eyes from being damaged.
- The product may not be operated properly if a USB hub is used to connect the product and a PC.
- Be careful to prevent the unit from dropping or overturning
- Please prevent the camera head to hit the desk top or any other hard objects, or it can be damaged easily.

5

Warranty Card

Model _____
Add _____
Tel _____
E-mail _____
Date _____

Certification

Model _____
Inspector No. _____
Production date _____
Manufacturer Joyusing Technology Co., Ltd.



Joyusing Technology Co., Ltd.

Website: www.joyusing.com

Tel: 0086-591-86399086

Email: sales@joyusing.com

Address: No.27 Yangzhou Road Cangshan District, Fuzhou, Fujian, China